


## Instruction of Watch Movement

# 3 hands / Day / Date

### ◆ Display

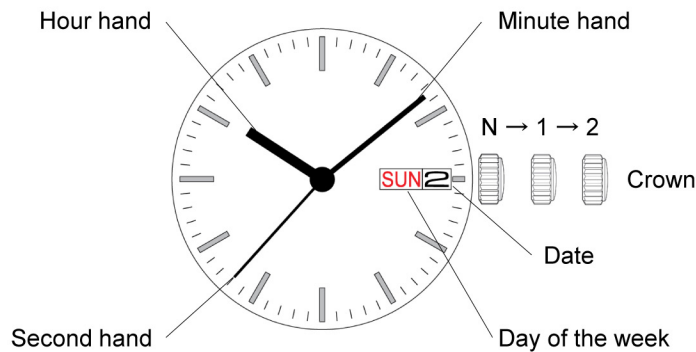

### ◆ Crown operation

		Crown position		
		N : normal	1 : 1st click	2 : 2nd click
Crown		Free	<ul style="list-style-type: none"> <li>• Turn counterclockwise for date change</li> <li>• Turn clockwise for day of the week change</li> </ul>	Time setting

### ◆ How to set time

- (1) Pull the crown out to the 2nd click position when the second hand is at the 12 o'clock position.
- (2) Turn the crown to set the hour and minute hands.  
Take a.m./p.m. into consideration when setting the hour and minute hands to the desired time.
  - When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
- (3) Push the crown back to the normal position.

### ◆ How to set date and day of the week

- (1) Pull the crown out to the 1st click position.
- (2) Turn the crown to set the date and the day of the week.
  - Do not set the date and day of the week between 9:00 p.m. and 4:00 a.m..
- (3) Push the crown back to the normal position.

Tips : When the date and the day of the week changes during daytime, it happens when a.m./p.m. is wrongly set.  
Advance the hour hand by 12 hours.

### ◆ Power depletion warning function

When the battery nears its end, the second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible.

- The watch remains accurate while the second hand is moving at two-second intervals.

Note : The availability of this function is different depending on the caliber.